

Rev C, 3/6/2003

~~REV B, February 10th, 2003~~

ICE TOP VIEW Flasher Board to Main Board Connector

| | | | | | | | | | | | |
|--------------|--------------|---------------|--------------|---------------|----------------|--------------|---------------|----------------|-------------|-------------|-------------|
| GND ○ 4 | FL_D3 ○ 8 | FL_D7 ○ 12 | WR\ ○ 16 | FL_A3 ○ 20 | ON/OFF ○ 24 | 3.3V ○ 28 | GND ○ 32 | ATTN ○ 36 | TMS ○ 40 | GND ○ 44 | GND ○ 48 |
| CLK\ ○ 3 | FL_D2 ○ 7 | FL_D6 ○ 11 | GND ○ 15 | FL_A2 ○ 19 | GND ○ 23 | +5V ○ 27 | TRIGN ○ 31 | P_TRIG ○ 35 | TCK ○ 39 | GND ○ 43 | -HV ○ 47 |
| CLK ○ 2 | FL_D1 ○ 6 | FL_D5 ○ 10 | GND ○ 14 | FL_A1 ○ 18 | FL_A5 ○ 22 | -5V ○ 26 | TRIGP ○ 30 | GND ○ 34 | TDO ○ 38 | GND ○ 42 | +HV ○ 46 |
| GND □ 1 | FL_D0 ○ 5 | FL_D4 ○ 9 | RD\ ○ 13 | FL_A0 ○ 17 | FL_A4 ○ 21 | 1.8V ○ 25 | GND ○ 29 | UNDEF ○ 33 | TDI ○ 37 | GND ○ 41 | GND ○ 45 |

SamTec TW-12-05-L-Q-345-070 Header mounted on the Flasher Board Bottom Side

SamTec ~~ESQT-112-02-L-Q-078~~ Header mounted on the Main Board Top Side

ESQT-112-02-L-Q-780